

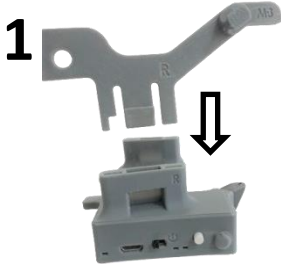
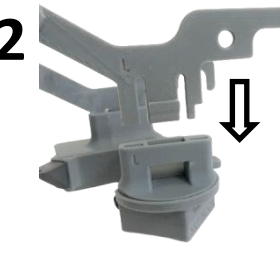
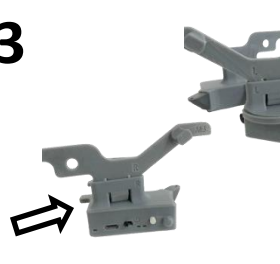
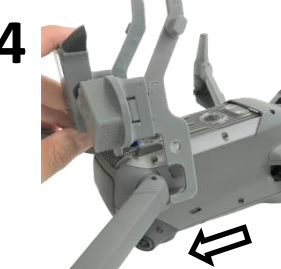
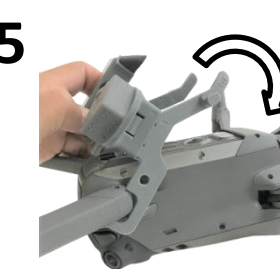



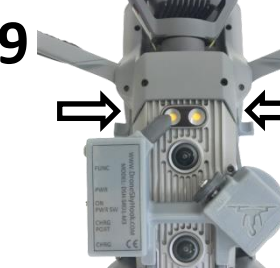
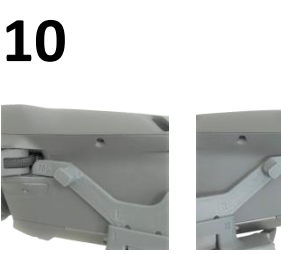




Drone-Sky-Hook

Professional Release & Drop device for DJI Mavic 3

Model numbers: DSH-SRD1-M3; DSH-SRDP1-M3

## Quick Installation Guide - DJI Mavic 3 v1.1

		
<p>Slide <b>DOWN</b> the Mounting Arm marked "R" into the device's "R" slot until it locks into the device</p>	<p>Slide <b>DOWN</b> the Mounting Arm marked "L" into the device's "L" slot until it locks into the device</p>	<p>Verify that both Mounting Arms are <b>Securely Locked</b> into the device</p>
		
<p>Slide the rear end of both Mounting Arms over the drone's rear arms</p>	<p><b>Rotate</b> the Sky Hook device assembly towards the drone's front</p>	<p>Verify that the front end of both Mounting Arms slide over the drone's body</p>
		
<p><b>Gently</b> pull both Mounting Arm ears slightly away from the drone's body</p>	<p>Slide <b>DOWN</b> the Sky Hook device assembly until it firmly rest on the drone's bottom (heatsink side)</p>	<p>Allow both Mounting Arms to spring back towards the drone's body and firmly lock into the drone</p>
		
<p>Verify that the front end of both Sky Hook's Mounting Arms are <b>Securely Locked</b> to the drone</p>	<p>Verify that the rear end of both Sky Hook's Mounting Arms are <b>Securely Locked</b> to the drone</p>	<p><b>ALL SET!</b></p>